


Quick Reference

LP-1000N

Label Printing Scale

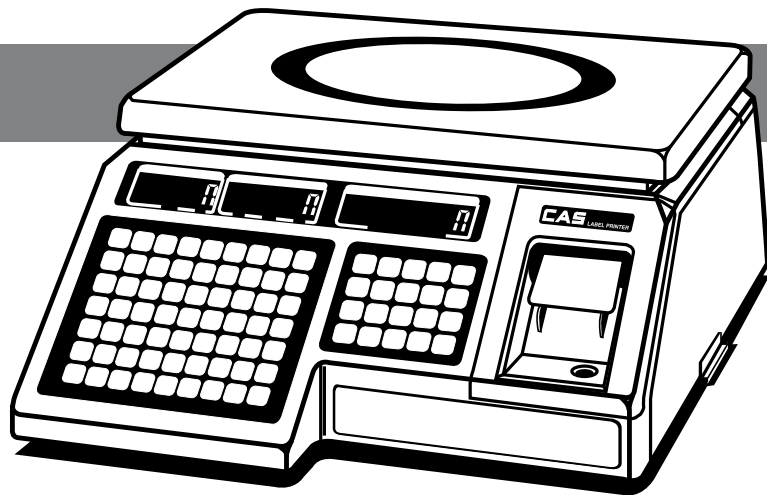

Quick Guide for Frequent Questions

- Date
- Time
- Department Number
- Store Name
- Head Data
- Speed Keys
- Temporary Price Change

Programming the Date

- Press **1** on the numeric keypad.
- Press **MODE** on the alpha/numeric keypad.
The display will show **PLU**.
- Press **↑ AUTO** until the display shows **SEt**.
- Press **PRT/***. The display will show **SEt EntEr 0**.
- Press **1** on the numeric keypad and then press **PRT/***.

The display will show **dAtE EntEr** and the currently programmed date. Enter the date (format: DDMMYY). Once the date is entered, the display automatically goes back to **Set**.

- Press **C** to go back to the weigh mode.

Programming the Time

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
The display will show **PLU**.
- Press **↑ AUTO** until the display shows **SEt**.
- Press **PRT/***. The display will show **SEt EntEr 0**
- Press **2** on the numeric keypad and then press **PRT/***

- Enter the time (format: HHMMSS). The time must be entered in the military time format (1:00 PM = 1300, 2:00 PM = 1400, etc). The display will automatically go back to **Set**.

- Press **C** to go back to the weigh mode.

Programming the Department Number

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
- The display will show **PLU**. Press **↑ AUTO** until the display shows **SEt**.
- Press **PRT/***. The display will show **SEt EntEr 0**
- Press **3** on the numeric keypad and then press **PRT/***

- Enter the new department number and press the **PRT/***.
The display will go back to **Set**.

- Press **C** to go back to the weigh mode.

NOTE: The change will not take effect until the scale is turned off and turned back on.

Programming for a Temporary Price Change

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
The display will show **PLU**.
- Press **↑ AUTO** until the display shows **SEt**.
- Press **PRT/▲** - the display will show **SEt EntEr 0**
- Press **6** on the numeric keypad and then press **PRT/▲**

The display will show **Pmode EntEr** and 'a number'.

- Press **1** to allow a temporary price change.
- Press **PRT/▲** twice - the display will go back to **SEt**.
- Press **C** to go back to the weigh mode.

Programming Store Name

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
The display will show **PLU**.
- Press **↑ AUTO** until the display shows **SHoP**.
- Press **PRT/▲**. The display will show **SHoP 01.01**
The display will show **nAmE 01.01**. If you make a mistake, the **←** key will delete the last character or **C** will delete all the characters. The first 01 is line 1

and the second 01 indicates how many characters have been programmed. You can program up to 28 characters. To program line 2, press **ENTER** or **↓**, and the display will show **SHoP 02.01**. You can also program 28 characters on line 2.

- When finished programming the SHoP, press **PRT/▲**
The display will show **SHoP**.
- Press **C** to go back to the weigh mode.

Programming Head Data

Head data appears in place of the commodity name when printing a non PLU item (PLU which is not programmed)

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
The display will show **PLU**.
- Press **↑ AUTO** until the display shows **HEAd**.
- Press **PRT/▲**.

Head data is typically used for a simple message, such as

“Thank You” on line one, and the store name on line two. You can program up to 28 characters per line.

The display will show **HEAd 01.01**

- Once line one is programmed, press **ENTER** or **↓** to go to line 2.
- When finished programming, press **PRT/▲**.
The display will show **HEAd**.
- Press **C** to go back to the weigh mode.

Programming Speed Keys

By default, speed key 1 is assigned to PLU 1, speed key 2 to PLU 2... speed key 54 to PLU 54.

To assign a PLU to a speed key:

- Press **1** on the numeric keypad
- Press **MODE** on the alpha/numeric keypad
The display will show **PLU**.
- Press **↓** until the display shows **PrSEt**.
- Press **PRT/▲**.
The display will read **s kEy 0**.
- Press the speed key that you wish to program on the

alpha numeric keypad. If for example, you press speed key 14 the display will now show **s kEy 14 14**. To program PLU number 100 to that speed key, key in 100. The display will now show **s kEy 14 100**. Press **PRT/▲** and the display will go to **s kEy 0**.

- If you wish to continue programming speed keys repeat the previous step. When you are done, press **PRT/▲** and the display will show **s kEy 0**. Press **PRT/▲** again and the display will show **PrSEt**.
- Press **C** to go back to the weigh mode.